



Lighting instructions

Your Chesneys stove has been designed to operate with minimum effort. As with all wood burning and multi fuel stoves your new stove will need to be 'cured' before commencing normal use.

For the first lighting of the stove after installation it is VERY IMPORTANT that the door remains slightly ajar during the first firing. During the first firing the paint finish goes through a curing process and will soften with the heat and then harden when the stove cools down. Leaving the door slightly ajar during the first firing will prevent the rope from sticking to the softened paint during the curing process. It is also very important the paint is not touched during this process.

Due to the newness of materials, the fire will give off an unpleasant odour for a period of time after commissioning. This is quite normal as the paint cures and will disappear after several uses once the stove has been operating at it's normal temperature for several hours.

Operate the appliance at a low output for the first few burns to allow the curing of the materials.

Avoid contact with the painted surfaces of the appliance during the first period of use. This includes the use of tools or the complimentary gauntlets.

Keep the room well ventilated to avoid a build up of fumes.

Please note that the Ivory paint is more susceptible to marking and soot transference and as a result Chesneys cannot be held responsible for marks made on the stove. All paint finishes are able to be touched up to a factory finish – please see notes on paint application.