


CHESNEYS

CLEAN BURN XL USER GUIDE

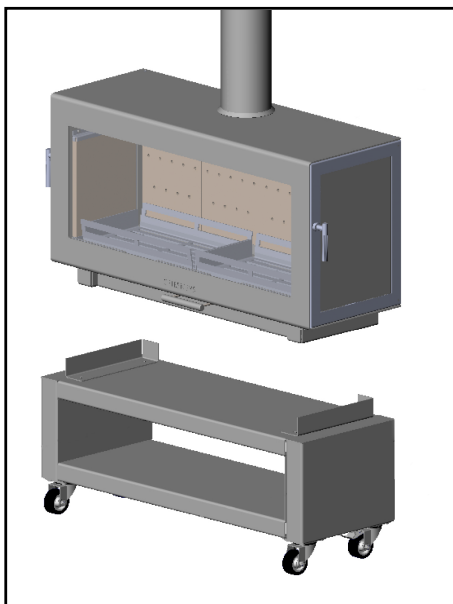

CONTENTS

POSITIONING & MOVING.....	1
LIGHTING.....	2
CARE INSTRUCTIONS.....	3
GUARANTEE & WARRANTY	5
IMPORTANT SAFETY INSTRUCTIONS.....	7
WARRANTY REGISTRATION.....	10
ANNUAL SERVICE RECORD.....	11


PLEASE READ ENTIRE USER GUIDE PRIOR TO USE

CLEAN BURN XL POSITIONING, LIGHTING & CARE INSTRUCTIONS

POSITIONING AND MOVING

The Clean Burn XL is available as a stand-alone unit or with an integrated log store base. We recommend people to only buy the unit without the base if they have a permanent location for the unit and do not intend to move it.


If you have a unit with the log store base, this has wheels meaning that the unit can be wheeled carefully to secondary positions for use and undercover during winter or bad weather if you wish, but due to the weight of the machine we would advise you to keep the unit on a single level and avoid attempting to move up stairs etc. The unit should always be positioned on a firm, level, and stable surface. Once in position, the two locking wheels should be locked, to avoid movement during usage.

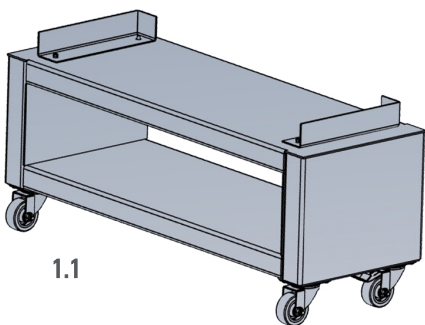

1.1

Position the log store in the desired location with the open end of the two L-shaped locating brackets as the front face of the unit (Diagram 1.1).

Lock the brakes on the two wheels so the log store can not move and is firmly positioned. Lift and slide the main burner unit into the L-shaped locating brackets so that the rear of the main burner unit base is tight to the upstand of the L-brackets.

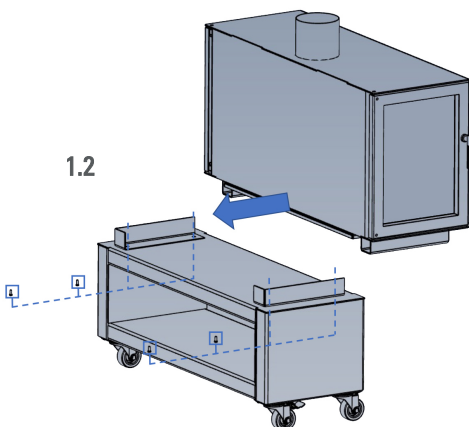

Take care not to trap hand/finger between the two units. Once in position secure the main burner unit to the log store base using the 4x bolts and washers provided (Diagram 1.2). If you wish to move the unit at any point ensure that the two units are fixed together properly.

Once secured in place, you can slide the flue pipe over the flue collar with the angled ring meeting the top of the fire box. A rain cap is provided to be used when required.


During the first firing the paint goes through a curing process. The unit may give off an unpleasant odour and the paint will smoke; this is quite normal as the paint cures and will disappear after a few uses. On the first lighting run the unit for at least an hour at a high temperature. We recommend burning the unit as soon as possible after delivery to complete this curing process. Until the paint is cured it is very soft and is susceptible to marks and scratches. Please avoid touching the paint during the curing process as it will be very soft until it has cured.

LIGHTING

Only well-seasoned or kiln dried logs should be used with a maximum moisture content of 20% and an approximate size of 300mm x 70mm diameter. Use of unseasoned damp logs will make lighting the unit difficult resulting in smoke/tar staining the glass, excessive smoke and particle emissions and also minimal heat output.


The below lighting procedure is designed to ensure minimal smoke and particle emission and also to minimise smoke stains on the glass window. With practice all the above will become easier to achieve.

The Clean Burn XL has a door at each end, with a sliding burning tray inside each, which you can pull out to a stop-point. There is an air lever positioned in the centre of the front of the unit below the glass to create the optimal air flow across the full length of the unit. To start the lighting process, pull out the air lever fully, open the doors at each end and pull out both trays until they reach their stop point.

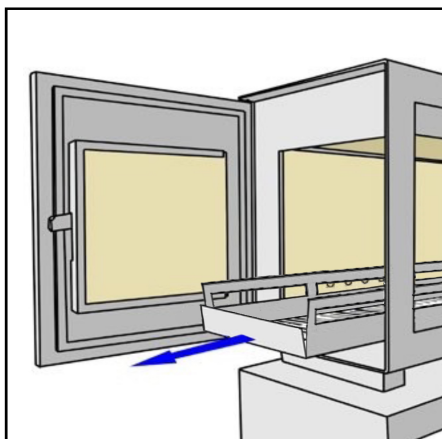

Set up a fire in both burning trays and we recommend using the top-down lighting method. Firstly place 2 or 3 small logs bark down in each tray, followed by a criss-cross of kindling on top and finally couple of firelighters. Push the trays back into position and light the firelighters. Ensure the doors remain slightly ajar to aid airflow. Once the kindling is fully alight and the logs have caught, you can close the doors. However, if the fire dies back or the unit begins to smoke excessively, reopen them until you can close without any change in the fire.

The air flow should be kept fully open for the first 30 to 40 minutes, adding fuel as required, to get the furnace up to temperature and operating at its best. After this time, assuming the fire is fully established, the air flow lever can be used to control the overall air supply to the fire and the desired heat output. The first logs will burn down quite quickly so to refuel add 2-3 split logs on top of the well burnt first layer.

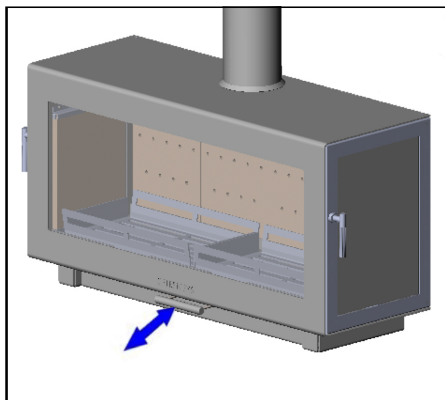

When lighting the unit from cold, the 30 to 40 minutes to get up to full heat is very important, as during this period all the internal components will be warmed up, ensuring a good, clean combustion is maintained throughout usage.

If, during the lighting procedure the glass becomes excessively blackened or the unit is smoking excessively, pull out the air lever to increase the flame.

Avoid burning more than 3 logs in each tray at any time as the unit has been designed to burn efficiently. Overfiring or overfilling the unit can result in damage and lead to the unit not operating correctly.

At the end of each period of use, the air lever should be pulled fully opened to allow the fire to burn itself out quickly.

CARE

This is an outdoor product and as such is exposed to the elements. Therefore, it will be susceptible to cosmetic and other immaterial deterioration over time such as rust. To preserve the appearance of the unit maintenance will be required.

Always use the cover when the unit is not in use. You must remove the flue pipe to fit the cover. At least once a month, and more regularly during bad weather, remove the cover and wipe down all surfaces with a dry micro fibre cloth to remove any moisture build-up and eradicate minor blemishes before they deteriorate further. A can of touch-up spray paint has been provided to be used as necessary. Emptying the ash trays and cleaning the glass with a Chesneys Atmosfire Dry wiper or 000 wire wool will all combine to keep your XL looking its best.



Warning: Never attempt to clean the machine while hot.



WARNING! Never attempt to move the machine while hot and always have the doors closed.



WARNING! The unit is very heavy and should only be moved by a competent person.



WARNING! Do not use spirit or petrol for lighting or re-lighting. Use only firelighters complying to EN 1860-3

Only genuine Chesney replacement parts should be used and are available online:

www.chesneys.co.uk

GUARANTEE AND WARRANTY

This warranty is for the original purchaser of the appliance from an authorised dealer/stockist and who has registered the warranty as required. This warranty is nontransferable. This warranty is in addition to and does not affect your statutory rights.

Your Chesneys Heater BBQ comes with the following warranty:

- A limited 3 year warranty on the structural integrity of the body. The warranty is for defects in materials and workmanship. HEAT has been manufactured using quality materials to resist corrosion as much as possible and use of specialist paint for metal surfaces suitable for high temperature and outdoor use. The paint surface and various metals can be affected by exposure to external factors including, but not limited to, chlorine, chemicals, humidity, salt. The paint finish will also be compromised by surface scratches and abrasions. For this reason, the warranty does not cover rust, oxidation, blemishes or fading. The Chesneys HEAT range is for outdoor use only. It is exposed to the elements/weather including rain, sun, snow, wind and damp and corrosion/wear and tear is to be expected. This does not detract from the functioning of the product. Maintenance will be required to preserve the appearance of the unit and touching up of the paint as necessary will be needed. Please note units located within 10 miles of coastal areas will be subject to increased moisture and salt levels and more frequent maintenance will be required.

- A limited 1 year warranty on the non-consumable parts such as the door, lid, handle, hinges, air damper plate, wooden shelves, digital thermometer and thermocouple. The wooden shelves must be treated with care and are not covered for normal outdoor weathering, changes in colour or appearance and cracks/splitting unless there is a loss of structural integrity.

Items such as fire bricks, baffle plate, glass, rope seal, door closing mechanism, ash pan, fire grate and grill are consumable items and are not covered by a warranty. These items will deteriorate over time and will need replacing. The length of time that these parts last will depend on the type of fuel used, and how hot and long the appliance is left to run. The fire bricks, rope seal and baffle plate are subjected to a huge amount of stress while the unit is under fire, so they will appear stressed quite quickly and the bricks can sometimes crack. This does not mean their integrity is compromised and they will have plenty of life left in them. The bricks should be replaced when they have eroded by 25% or you can see the steel behind them or they have cracked with a gap of 3mm or greater.

The warranty is based on normal domestic use. Products used in a commercial setting has a limited 1 year warranty on the structural integrity of the body. The warranty does not cover improper use, mishandling or unauthorised modifications. The warranty does not cover accidental or consequential damage. The warranty does not cover scratches, dents and other cosmetic marks which do not affect the performance of the appliance. This warranty is not applicable if purchased through an unauthorised dealer/stockist. The warranty begins at the date of purchase. Any warranty claim must be addressed to the authorised dealer from whom the Heater BBQ has been purchased and include the purchase receipt showing date of purchase and the name of the dealer, a description of the problem and preferably visual evidence of the defect.

Items will be repaired or replaced at the discretion of Chesneys, subject to the terms and conditions of the warranty. Chesneys is not liable for shipping costs, duties, taxes, repair or return, unless authorised in advance in writing by Chesneys.

Caution note: Never place your Chesneys Heater BBQ or Clean Burn unit directly on or nearby combustible materials and never leave the product unattended while in use. failure to safely operate the Chesneys Heater BBQ or Clean Burn will void the warranty. Chesneys disclaim any liability for any direct, indirect, incidental or consequential damage which may result.

To validate your warranty please register your appliance online
via the Chesneys website:

<https://secure.chesneys.co.uk/warranty/registration.asp>

IMPORTANT SAFETY INSTRUCTIONS



Always place the appliance on a non-combustible surface.



Check that there is no combustible material above the appliance, trees etc.



Ensure that the appliance is stable before lighting. Use the levelling feet (where fitted).



Always use the gloves provided when touching the appliance.
All surfaces can be hot.



WARNING! This unit will become very hot, do not move it during operation.



Do not use indoors! Or in a tent.



WARNING! Keep children and pets away.



Never exceed 700°C or go over 650°C for more than 2 minutes.



Do NOT cover or leave flammable substances or material on or near the appliance.



WARNING: Never attempt to move the unit with the doors in the open position.

Bulgarian	<p>“Преди започване на печенето, изчакайте горивото да се покрие със слой пепел”</p> <p>“ПРЕДУПРЕЖДЕНИЕ ! Това барбекю става много горещо, не премествайте по време на работа”</p> <p>“Не използвайте на закрито!”</p> <p>“ПРЕДУПРЕЖДЕНИЕ ! Не използвайте спирт или нефтопродукти за запалване или разпалване! Използвайте само подпалки, отговарящи на EN 1860-3!”</p> <p>“ПРЕДУПРЕЖДЕНИЕ ! Дръжте децата и домашните любимци на разстояние”</p>
Croatian	<p>„Ne peći prije nego što se na gorivu stvori sloj pepela!“</p> <p>“UPOZORENJE! Ovaj roštilj postat će jako vruć, ne pomicati ga za vrijeme rada!”</p> <p>“Ne upotrebljavati u zatvorenim prostorima!”</p> <p>“UPOZORENJE! Ne upotrebljavati alkohol ili benzin za potpalu ili ponovnu potpalu! Upotrebljavati samo sredstva za potpalu sukladna s normom EN 1860-3!”</p> <p>“UPOZORENJE! Držati izvan dohvata djece i kućnih ljubimaca!”</p>
Czech	<p>“potraviny připravovat až na žhavých uhlících s vrstvou popela”</p> <p>“VÝSTRAHA! Povrch rožně bude velmi horký, během provozu s ním nemanipulovat.”</p> <p>“Nepoužívat v uzavřených prostorech!”</p> <p>“VÝSTRAHA! K zapalování či opětovnému zapalování nepoužívat líh ani benzin! Používat pouze podpalovače v souladu s EN 1860-3!”</p> <p>“VÝSTRAHA! Děti a domácí zvířata držet z dosahu.”</p>
Danish	<p>“Begynd ikke tilberedningen af maden før briketterne er dækket af grå aske</p> <p>”ADVARSEL! Denne grill bliver meget varm, flyt ikke på den når den er i brug”</p> <p>”Brug den aldrig indendørs”</p> <p>”ADVARSEL! Brug ikke sprit eller benzin til antænding eller genantænding! Brug kun optændingsblokke der opfylder kravene i EN 1860-3!”</p> <p>”ADVARSEL! Hold børn og kæledyr på sikker afstand”</p>
Dutch	<p>“begin met het barbecueen pas nadat zich op de kooltjes een laagje as heeft gevormd “</p> <p>“WAARSCHUWING! Deze barbecue wordt erg heet, niet verplaatsen tijdens het gebruik.”</p> <p>“Niet binnenshuis gebruiken!”</p> <p>“WAARSCHUWING! Gebruik geen spiritus, benzine of andere brandbare vloeistoffen om aan te steken of te herontsteken! Gebruik alleen ontstekers die voldoen aan de EN 1860-3!”</p> <p>“WAARSCHUWING! Houdt kinderen en huisdieren uit de buurt van de barbecue”</p>
Finnish	<p>“Grilli on valmis ruoanlaittoon vasta, kun polttoaine on tuhkan peitossa.”</p> <p>“VAROITUS! Grilli kuumenee käytössä. Grilliä ei saa siirtää käytön aikana.”</p> <p>”Grilliä ei saa käyttää sisätiloissa.”</p> <p>“VAROITUS! Älä käytä bensiiniä tai spritiä sytyttämiseen tai liekkien kohentamiseen. Käytä vain standardin EN 1860-3 mukaisia sytykkeitä.”</p> <p>“VAROITUS! Pidä lapset ja lemmikkieläimet poissa grillin läheisyydestä.”</p>

French	<p>« Avant de commencer la cuisson, attendre qu'une couche de cendres recouvre le combustible. »</p> <p>« ATTENTION ! Ce barbecue va devenir très chaud. Ne pas le déplacer pendant son utilisation. »</p> <p>« Ne pas utiliser dans des locaux fermés ! »</p> <p>« ATTENTION ! Ne pas utiliser d'alcool ou d'essence pour allumer ou réactiver le feu ! Utiliser uniquement des allume-feu conformes à l'EN 1860-3 ! »</p> <p>« ATTENTION ! Ne pas laisser le barbecue à la portée des enfants et des animaux domestiques. »</p> <p>“Grillgut erst auflegen, wenn der Brennstoff mit einer Ascheschicht bedeckt ist”;</p>
German	<p>“ACHTUNG! Dieses Grillgerät wird sehr heiß und darf während des Betriebes nicht bewegt werden”</p> <p>“Nicht in geschlossenen Räumen nutzen!”</p> <p>“ACHTUNG! Zum Anzünden oder Wiederanzünden keinen Spiritus oder Benzin verwenden! Nur Anzündhilfen entsprechend EN 1860-3 verwenden!”</p> <p>“ACHTUNG! Kinder und Haustiere fernhalten”</p>
Italian	<p>“iniziare a cucinare solo quando il combustibile ha formato uno strato superficiale di cenere”</p> <p>“ATTENZIONE! Questo barbecue diventerà molto caldo, non movimentarlo durante il funzionamento”</p> <p>“Non utilizzarlo in ambienti chiusi”</p> <p>“ATTENZIONE! Non utilizzare liquidi infiammabili per accendere o ravvivare la fiamma. Utilizzare solo gli accenditori in accordo con la norma EN 1860-3!”</p> <p>“ATTENZIONE! Tenere lontano dai bambini e dagli animali domestici”</p>
Romanian	<p>« Începeți să gătiți numai dacă s-a format un strat de cenușă peste combustibil »</p> <p>« ATENȚIE! Grătarul de frigere va fi foarte fierbinte, a nu se muta în timpul funcționării!»</p> <p>« ATENȚIE! A nu se utiliza în spații închise. Risc crescut de intoxicație cu monoxid de carbon. »</p> <p>« După terminarea utilizării grătarului, înainte de depozitarea lui într-o încălăzită închisă, îndepărtați jăratecul și cenușa rămasă în grătar. »</p> <p>« ATENȚIE! A nu se utiliza alcool sau benzină pentru aprindere sau re-aprindere! A se utiliza doar aprinzătoare în conformitate cu EN 1860-3 ».</p> <p>« ATENȚIE! Îndepărtați copiii și animalele de grătarul de frigere »</p>
Spanish	<p>“Antes de començar a cocinar, verifique que el combustible está recubierto de cenizas”</p> <p>¡ATENCIÓN! ¡Esta barbacoa se calentará mucho, no la mueva durante su utilización!</p> <p>¡No utilizar en locales cerrados!</p> <p>¡ATENCIÓN! ¡No use alcohol o gasolina para encender o avivar el fuego! Utilice únicamente los combustibles de encendido conformes a la Norma EN 1860-3.</p> <p>¡ATENCIÓN! ¡No deje la barbacoa al alcance de los niños y animales domésticos!</p>



WARRANTY REGISTRATION

To validate and start your warranty please fill out this form and send it back to

Chesneys (warranty Registration)
Units 12-16 Eldon Road,
Beeston,
Nottingham,
NG9 6DZ
U.K.

Alternatively you can register your product online via the Chesneys website by completing the online form:

<https://secure.chesneys.co.uk/warranty/registration.asp>

All items are required:

Your Details	
Name:	
Address:	
Postcode:	
Telephone No:	
Email:	

Purchase Details	
Purchased from:	
Purchase Date (dd/mm/yyyy):	
Product Name:	
Serial Number:	

ANNUAL SERVICE RECORD

Date	Company	Name	Signature

CHESNEYS

London Showrooms

194-196 Battersea Park Road,
London, SW11 4ND

570 King's Road,
London, SW6 2DY

70 London Road,
St Albans, AL1 1NG

Telephone: 020 7627 1410
Email: sales@chesneys.co.uk

For details of UK nationwide stockists:
Telephone: 020 3177 4200
Email: stockists@chesneys.co.uk

Spare parts, Accessories & Fuel

www.chesneys.co.uk

Serial Number: